


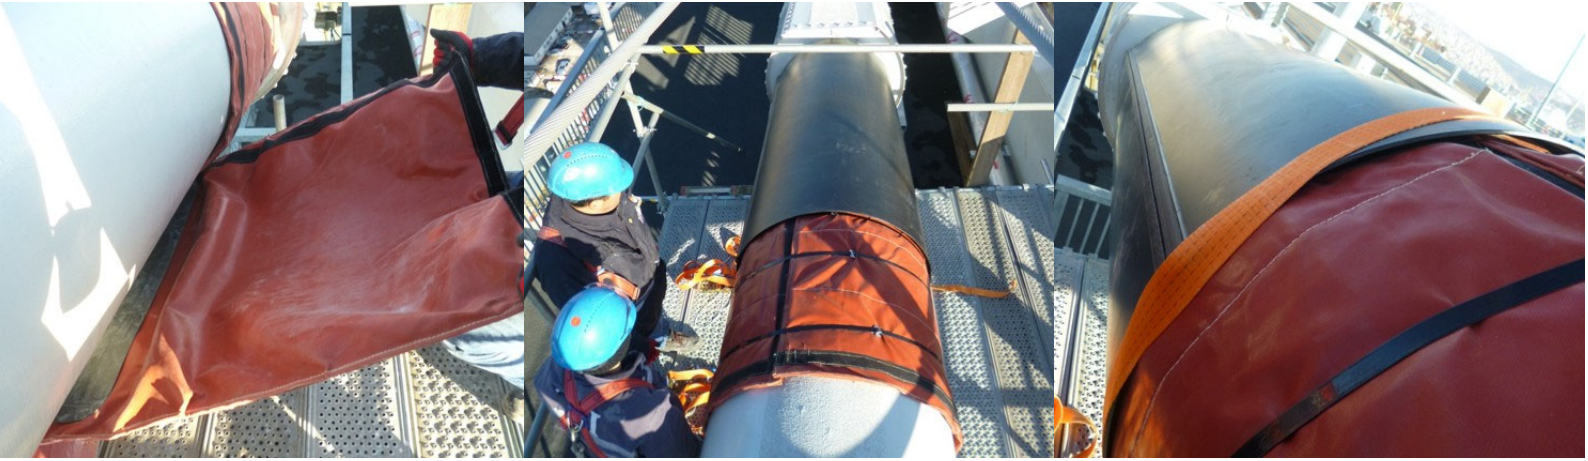


Following materials are required for the installation

- FPB Blankets
- Stainless Steel Band
- Stainless Steel Clamps
- HDPE Inner Cover Sheets
- HDPE Outer Cover Sheets
- Duct Tape
- HDPE Sliding Block


Following tools are required for the installation

- Stainless Steel Band Clamp equipment
- Ratchet Lever Hoist incl. Straps for easy slide in
- Fastening Belts
 - As an option for the connection of the HDPE Cover Sheets


1. Required installation gap should be at least 3 meters.

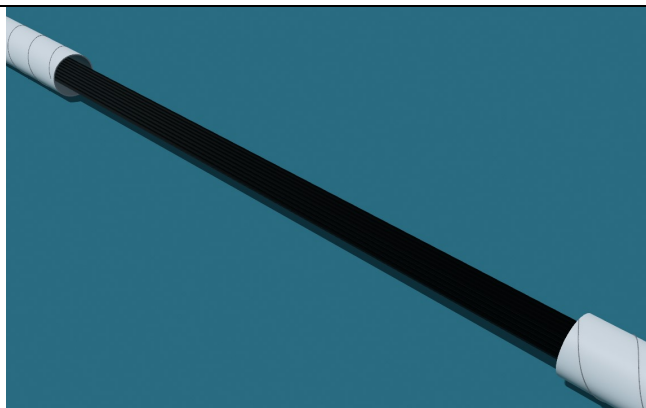

2. Wrap the **inner sliding sheet** around the strands.

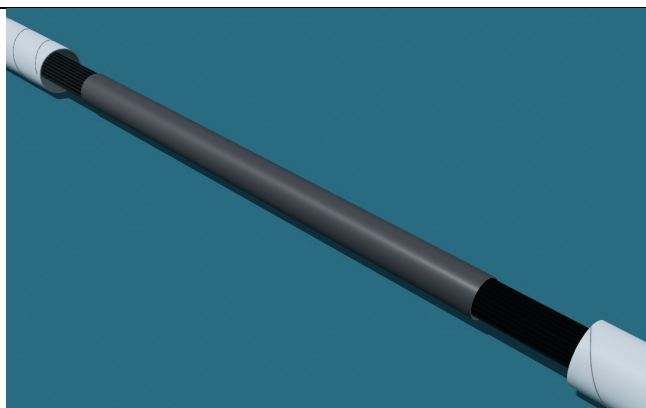


3. Use duct tape to fix the **inner sliding sheet** in the correct position.

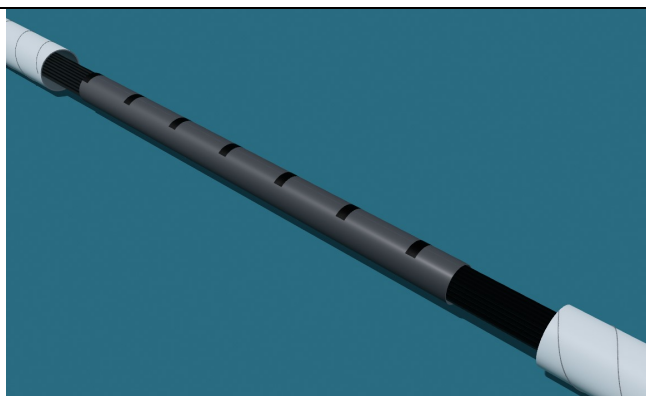


4. Check and define the inner and outer layer of the **blanket** by the Velcro.

Wrap the **blanket** around the **inner sliding sheet** and fix by closing the Velcro.

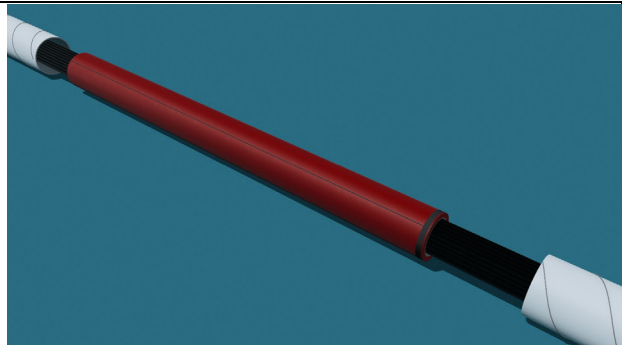


5. Fix the **stainless-steel band** with the **clamps** in approx. 300mm distance, by using the “band-it” **clamping tool**.

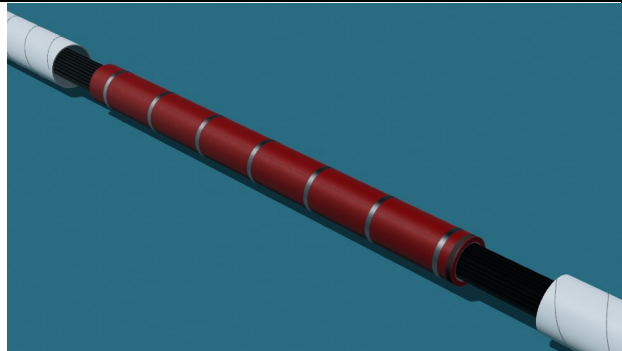


6. **Limit the tightening of the fixing band to the outer diameter of the blanket only!!!**


(Do **Not** fully tighten the fixing band to the maximum, since the final sliding for installation would be impossible!)

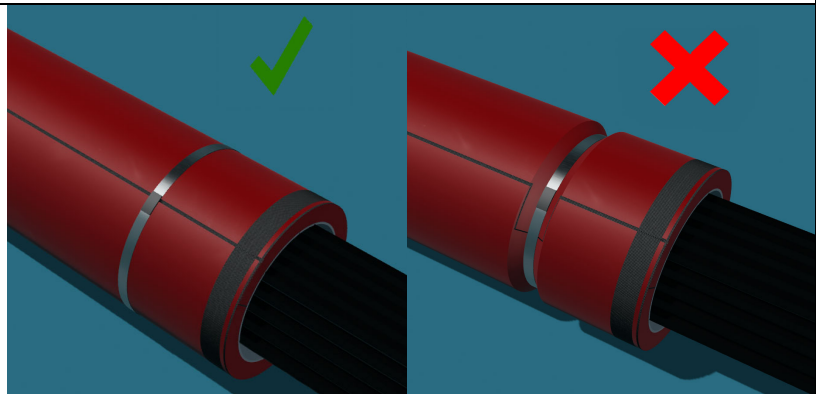

7. Wrap the **outer sliding sheet** around the **blanket** by keeping the lower approx. 200mm section uncovered (to allow next blanket connection).
Fix the **outer sliding sheet** with duct tape.

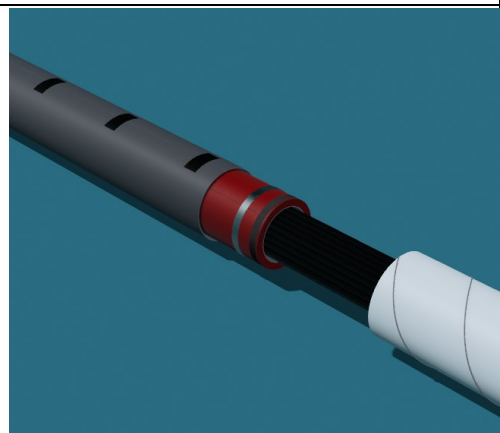


8. Insert the two **sliding block** halves with the thinner side between strand bundle and **inner sliding sheet**, so full set of inner sliding sheet, blanket and outer sliding sheet can get moved together.

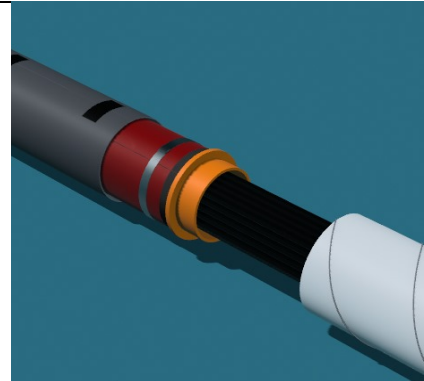


9. Slide the full assembly inside the stay pipe by keeping the lower section approx. 400mm outside the stay pipe for connecting the next **blanket**.

Remark: Depending on the required sliding force, the support of a ratchet lever hoist, temporarily fixed with straps to the sliding block, can be used.

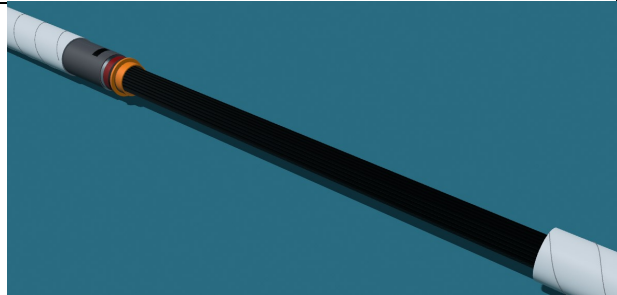

10. Remove the **sliding block** and proceed with the next **blanket** acc. step 2 and 3.

Wrap the **blanket** acc. **Step 4** by overlapping approx. 100mm over the previous blanket and additionally, turn clockwise by 100mm (to avoid multi overlapping in this connections section).

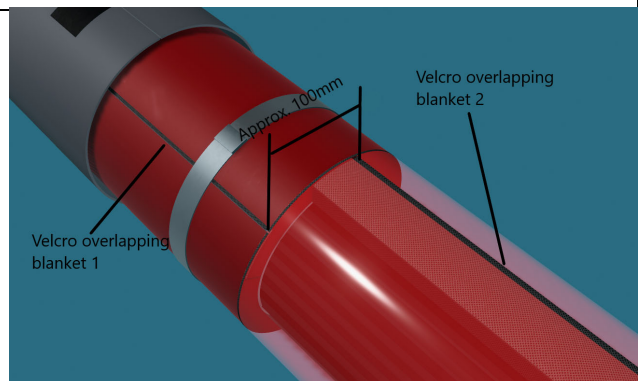

11. Continue with **Step 5** for this second blanket and repeat **Steps 2-10** for all next blankets until full length is covered.